


SCICLONEX™ SEPARATOR

Maintenance Manual

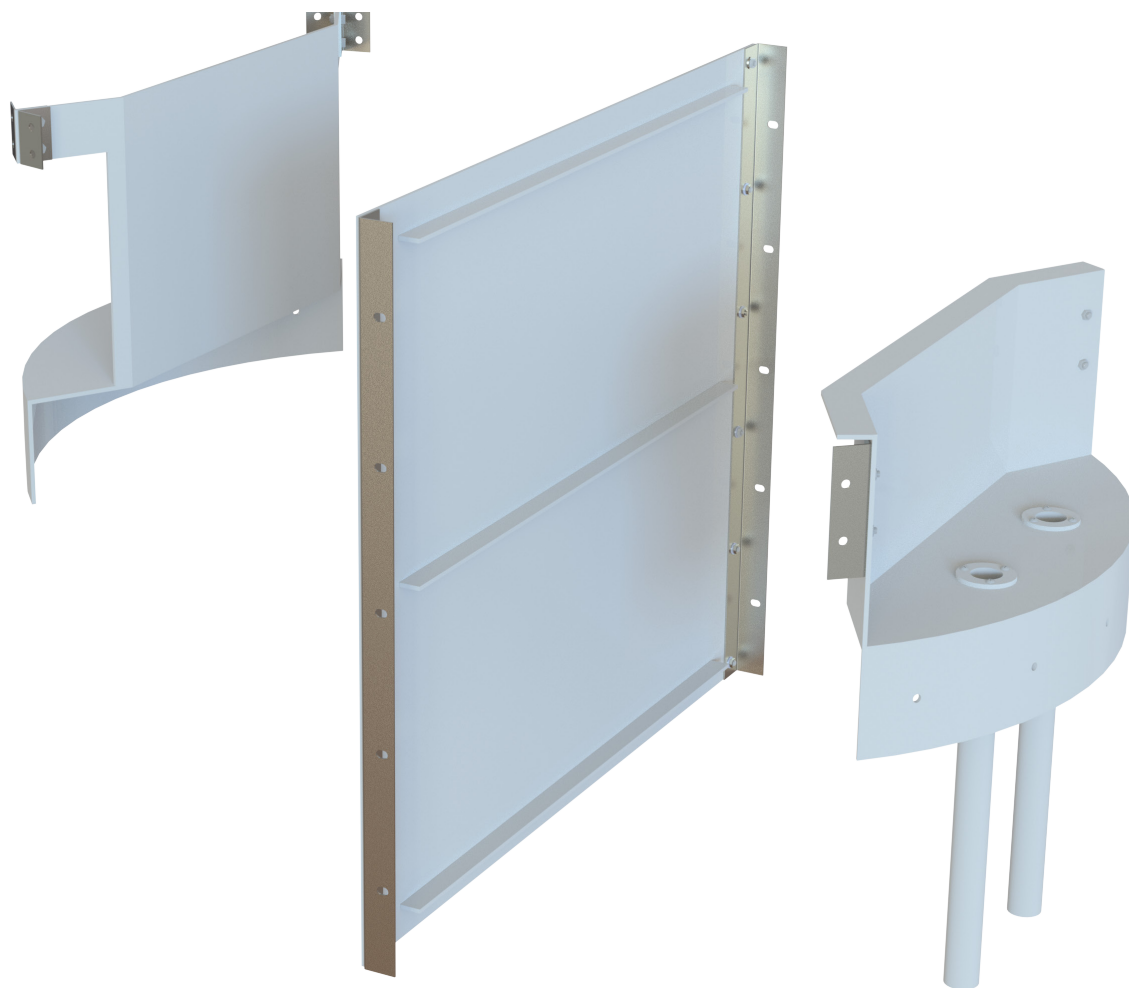


Play Setup Video



English

OVERVIEW

The SciCloneX™ Separator is designed to remove high levels of trash, debris, sediments and hydrocarbons. Its efficient design and construction maximize longevity and minimize maintenance requirements. The simple design of the system allows for unimpeded access for quick and easy maintenance. The SciCloneX™ Separator is able to effectively capture and store sediment with no maintenance or loss of treatment capacity for a several

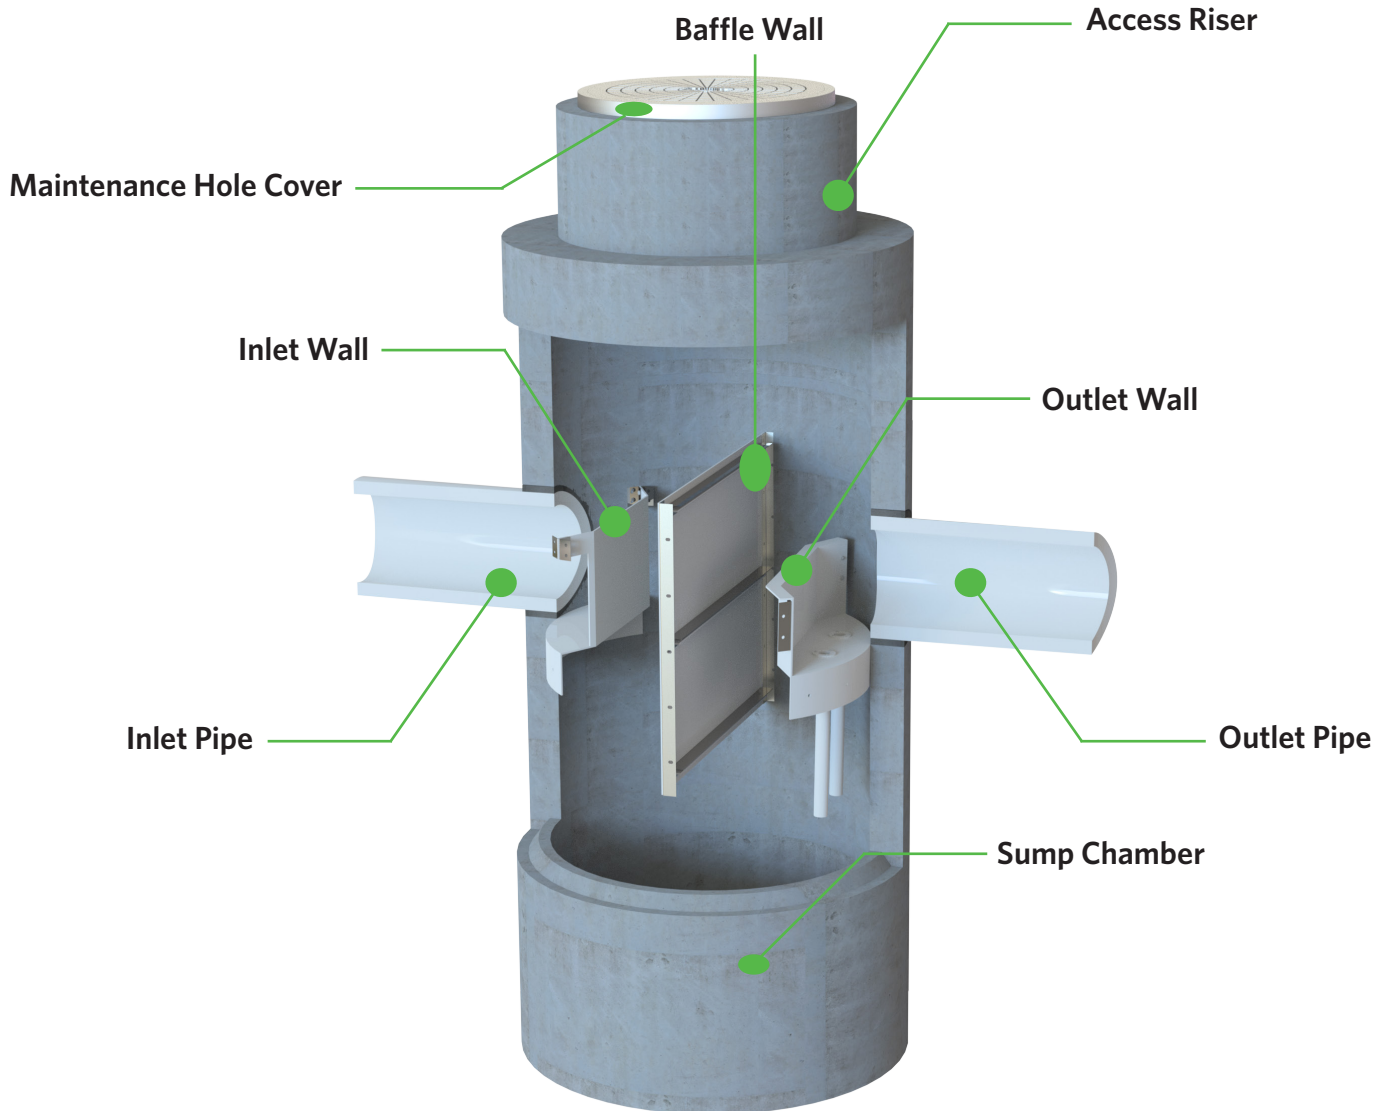

INTRODUCTION

Inspection and maintenance on the SciCloneX™ Separator is necessary. Stormwater regulations require that all BMPs be inspected and maintained to ensure they are operating as designed to allow for effective pollutant removal and provide protection to receiving water bodies. It is recommended that inspections be performed multiple times during the first year to assess site-specific loading conditions. This is recommended because pollutant loading can vary greatly from site to site. Variables such as nearby soil erosion or construction sites, winter sanding of roads, amount of daily traffic and land use can increase pollutant loading on the system. The first year of inspections can be used to set inspection and maintenance intervals for subsequent years. Without appropriate maintenance a BMP can exceed its storage capacity which can negatively affect its continued performance in removing and retaining captured pollutants.

INSTRUCTIONS

MAINTENANCE INDICATORS

Based upon observations made during inspection, maintenance of the system may be required based on the following indicators:

- Missing or damaged internal components.
- Obstructions in the system of its inlet or outlet.
- Excessive accumulation of floatable in the sump chambers in which the length and width of the chambers behind oil/floatables baffle wall is fully impacted extending down more than 9".
- Excessive accumulation of sediment in the sump chamber or more than 18" in depth.

INSPECTION EQUIPMENT

Following is a list of equipment to allow for simple and effective inspection of the SciCloneX™ Separator:

- Bio Clean Environmental Inspection Form (contained within this manual).
- Flashlight.
- Manhole hook or appropriate tools to remove access hatches and covers.
- Appropriate traffic control signage and procedures.
- Measuring pole and/or tape measure.
- Protective clothing and eye protection.
- Note: entering a confined space requires appropriate safety and certification. It is generally not required for routine inspections or maintenance of the system.



INSPECTION STEPS

The core to any successful stormwater BMP maintenance program is routine inspections. The inspection steps required on the SciCloneX™ Separator are quick and easy. As mentioned above the first year should be seen as the maintenance interval establishment phase. During the first year more frequent inspections should occur in order to gather loading data and maintenance requirements for that specific site. This information can be used to establish a base for long-term inspection and maintenance interval requirements.

The SciCloneX™ Separator can be inspected through visual observation without entry into the system. All necessary pre-inspection steps must be carried out before inspection occurs, especially traffic control and other safety measures to protect the inspector and near-by pedestrians from any dangers associated with an open access hatch or manhole. Once these access covers have been safely opened the inspection process can proceed:

- Prepare the inspection form by writing in the necessary information including project name, location, date & time, unit number and other info (see inspection form).
- Observe the inside of the system through the access hatches. If minimal light is available and vision into the unit is impaired utilize a flashlight to see inside the system.
- Look for any out of the ordinary obstructions in the inflow pipe, sump chamber, or outflow pipe. Write down any observations on the inspection form.
- Through observation and/or digital photographs estimate the amount of floatable debris accumulated on the influent side of the oil/Floatables skimmer. Record this information on the inspection form. Next utilizing a tape measure or measuring stick estimate the amount

MAINTENANCE PROCEDURES

It is recommended that maintenance occurs at least three days after the most recent rain event to allow for drain down of any associated upstream detention systems. Maintaining the system while flows are still entering it will increase the time and complexity required for maintenance. Cleaning of the sump chamber can be performed from finish surface without entry into the vault utilizing a vacuum truck. Once all safety measures have been set up cleaning of the sump chamber can proceed as followed:


- Remove all access hatches (requires traffic control and safety measures to be completed prior).
- Using an extension on a vacuum truck position the hose over the opened access hatch and lower into the center of the sump chamber on the inlet side of the oil/floatables skimmer. Remove all floating debris, standing water and sediment from the sump chamber. Access to the bottom of the sump chamber is unimpeded. The vac hose can be moved from side-to-side to fully remove sediments at the corners. A power washer can be used to assist if sediments have become hardened and stuck to the walls or the floor of the chamber. Repeat the same procedure on the effluent side of the oil/floatables skimmer to remove any remaining sediment. This completes the maintenance procedure required on the sump chamber and the SciCloneX™ Separator .

- The last step is to close up and replace all access hatches and remove all traffic control.
- All removed debris and pollutants shall be disposed of following local and state requirements.
- Disposal requirements for recovered pollutants may vary depending on local guidelines. In most areas the sediment, once dewatered, can be disposed of in a sanitary landfill. It is not anticipated that the sediment would be classified as hazardous waste.
- In the case of damaged components, replacement parts can be ordered by the manufacture.


MAINTENANCE SEQUENCE




1. Remove the Maintenance Hole Covers. Set Up Vacuum Truck to clean the Sump Chamber.

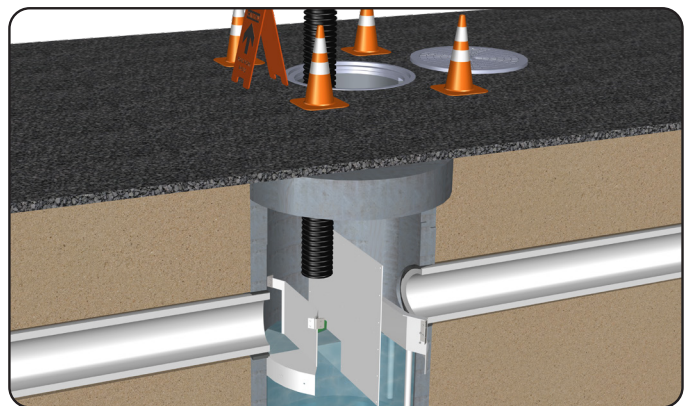

2. Insert Vacuum Hose and Vacuum Out All Trash, Sediment and Standing Water.

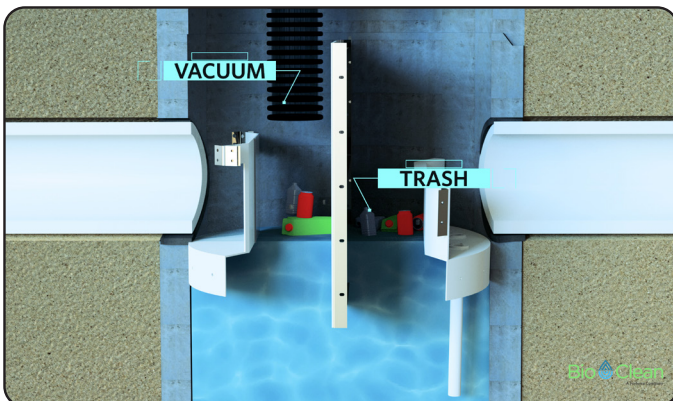


3. Insert Vacuum Hose On the Outlet Side of the Oil/Floatables Skimmer and Vacuum Out Any Trash.

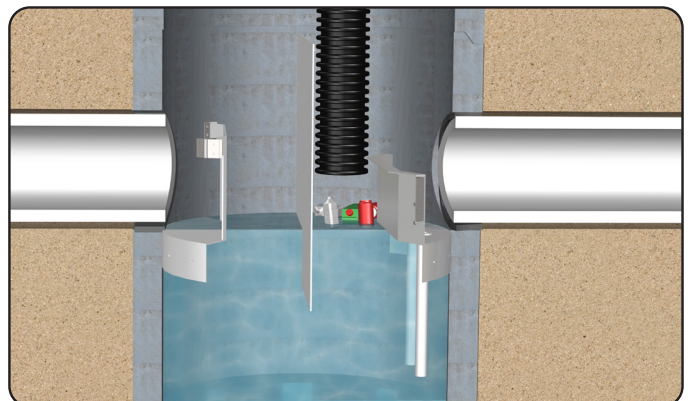


4. Repeat This Process for the Opposite Side and Ensure no Trash Remains.

MAINTENANCE SEQUENCE

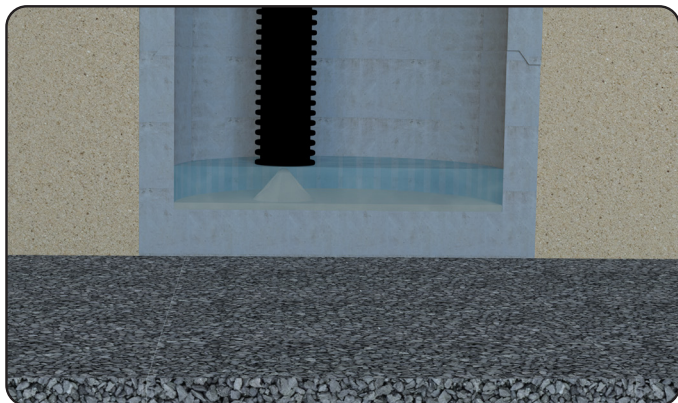


5. Continuing with the Vacuum, Remove the Left-over Water and Drain the Chamber.

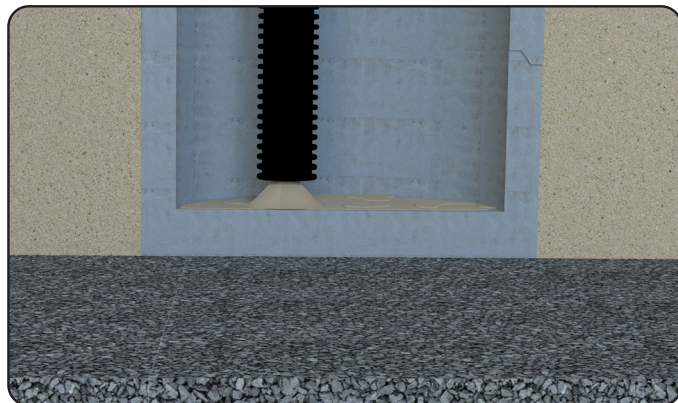

6. Vacuum the Sediment in the bottom of the Structure. Replace Maintenance Hole Cover when Finished.

TECHNICAL SUPPORT

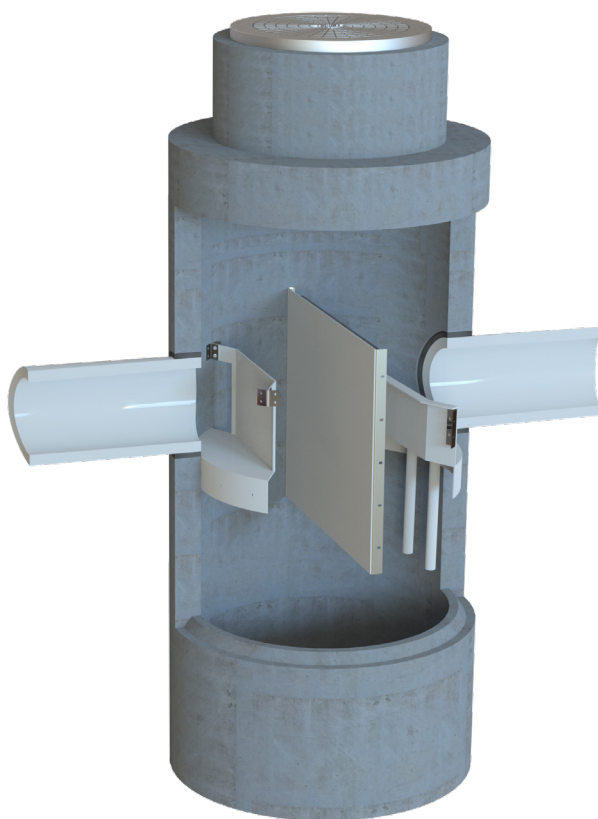

Contech Engineered Solutions
9100 Centre Pointe Drive
West Chester, OH 45069

<https://www.conteches.com/technical-guides/>

Contact Us:
Phone: 1-800-338-1122
Email: Info@Conteches.com