



SOPHISTICATED STORAGE

SHOW HAND CORNER DELUXE

User Manual




Play Setup Video



English

INTRODUCTION

Introducing the Show Hand Corner Deluxe assembly manual. In this manual, we will show you how to assemble your own Show Hand Corner Deluxe. Before beginning the assembly, make sure that there is ample room for installing and assembling your product. Please check the following chart to ensure the product size exactly suits your cabinet based on the following dimensions.

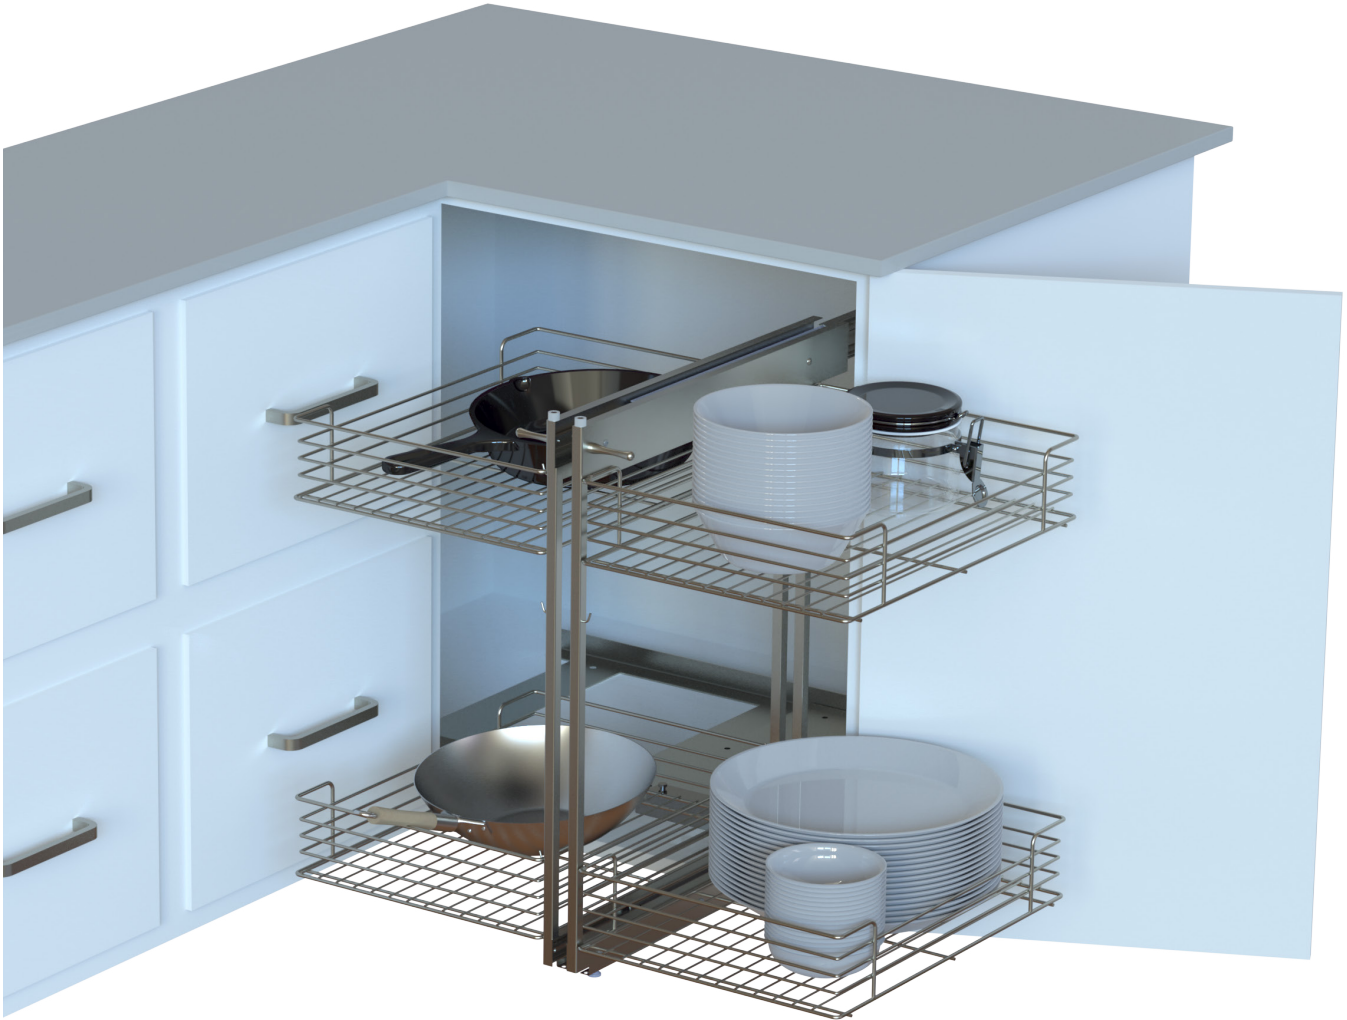

WARNING

There are four baskets that come with your Show Hand Corner Deluxe. Please make sure not to overburden the weight capacity of your baskets.

PARTS & TOOLS CHECK LIST


Ensure that the following parts are included with your Show Hand Corner Deluxe. These are crucial components that will be the mainframe of your entire assembly. The following tools are recommended for this installation.




Frame Base x1



Plastic Spacer x1

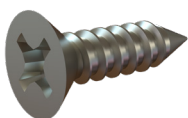

**ST 3.5 x 16 Screws
x6**

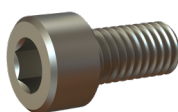


M6*16 Hexagon Screw x6



Allen Key x1



Frame Assembly x1

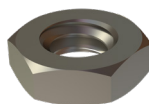


Hexagon Nut M6 x1



Wheel x1

PARTS & TOOLS CHECK LIST

Ensure that the following parts are included with your Show Hand Corner Deluxe. These are crucial components that will be the mainframe of your entire assembly. The following tools are recommended for this installation.

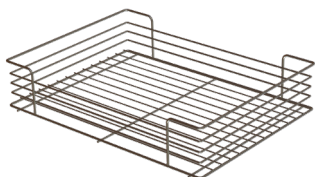

Baskets x4



Base Cover x1



Handle x2



**Power Drill with
Phillips Head Bit x1**




**2.5mm Drill Bit
x1**



**Phillips Head
Screwdriver x1**

PARTS

Below is a breakdown of how the parts will come together for your final product, as detailed in the following steps. You can install the Show Hand Deluxe Corner on the right side of the cabinet and on the left side of the cabinet.

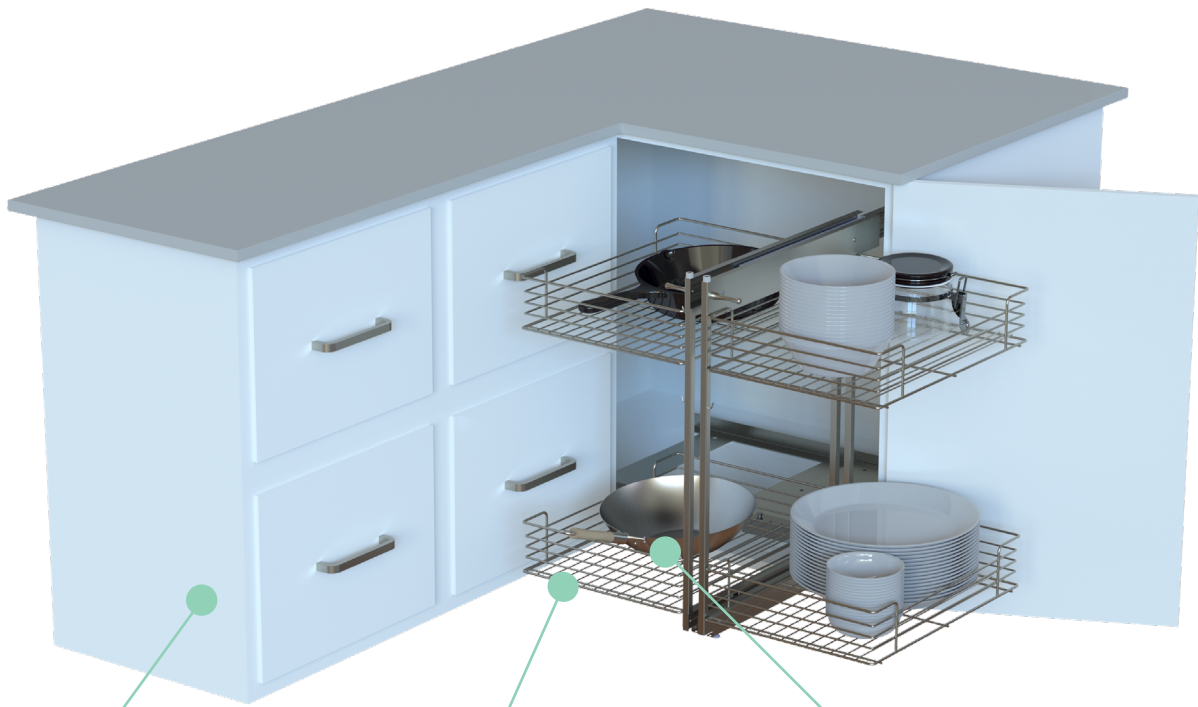

Cabinet

Dimensions of your cabinet may vary, but should be within a set average height. Please refer to the next page for further information.

Baskets


A total of four baskets are provided with your Show Hand Corner Deluxe. Please refrain from overburdening the basket weight limit capacity.

Frame Assembly

The Frame Assembly will assist in the foundation of your Show Hand Corner Deluxe, and will hold your baskets into place securely.

INSTRUCTIONS

Step 1 - Checking the Cabinet Size


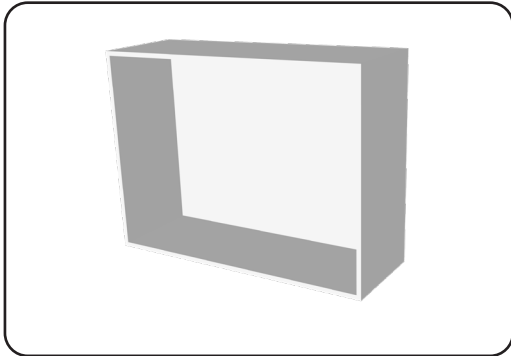


1. Locate the cabinet and measure accordingly

Begin Step One by locating the cabinet and measuring out the dimensions of the cabinet so that you can properly install the desired orientation that best suites your cabinet's measurements.


The layout of both left and right orientations are shown below. The measurements shown below are served as a reference to your preferred orientation Please ensure that proper measurements have been recorded so that you can determine the proper placement for parts and installation.

Show Hand Corner Deluxe Orientation

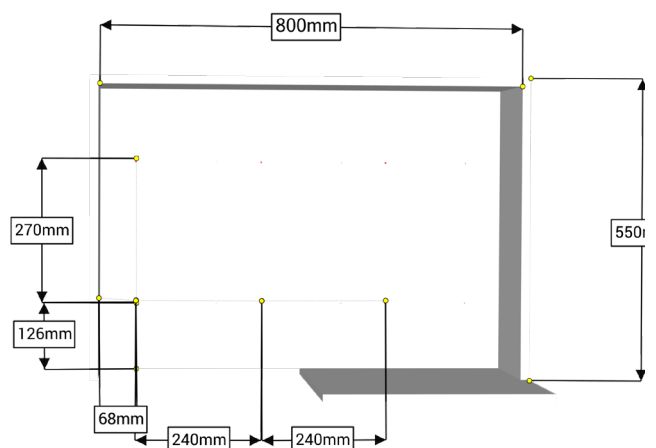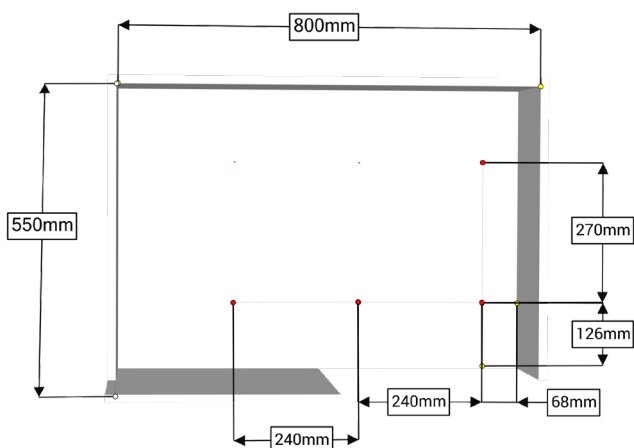


INSTRUCTIONS

Step 2 - Installing the Frame Base

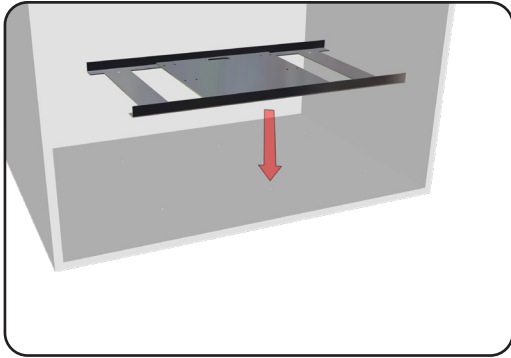


1. Locate the frame base and align to holes

Begin Step Two by locating the frame base and align it to the previously drilled holes from Step 1.

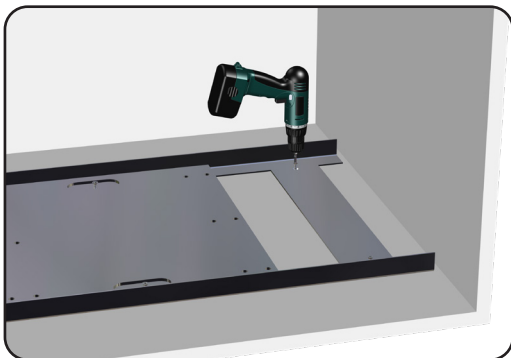

2. Secure the frame base

Secure the frame base to the bottom of the cabinet using six ST 3.5 screws. Tighten the screws using a power drill with a Phillips head bit. Take care not to over tighten the screws.

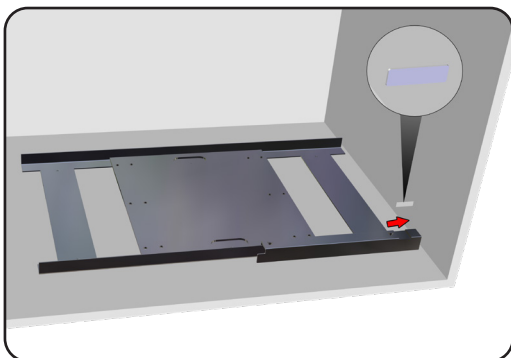


3. Attach the base cover and plastic spacer

Attach the base cover to the location shown, and snap into place. After the base cover has been secured, locate the plastic cover and place it in the following section, as shown.


INSTRUCTIONS

Step 3 - Installing the Frame Assembly

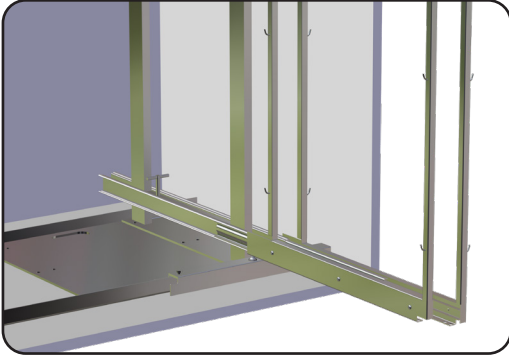


1. Locate the Frame Assembly

Begin Step Three by locating the Frame Assembly and aligning it to the section of the upper six holes are located, as shown.

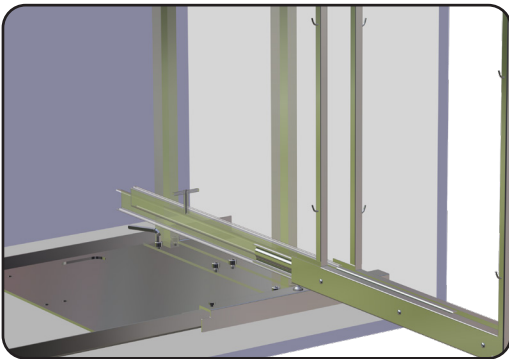

2. Secure the Frame Assembly

Next, secure the bottom section of the sides using six M6*16 Hexagon Screws, three on each side. Use the provided Allen Key. Take care not to over tighten the screws. Repeat these steps for the opposite side.

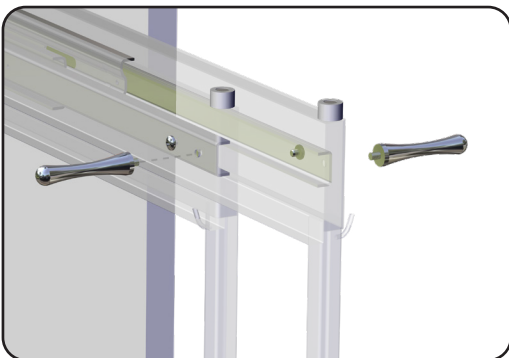


3. Attach the handles

Locate the handles and attach them to the upper right section of the frame assembly, and tighten the frames into the locations shown.


INSTRUCTIONS

Step 4 - Installing the Front Wheels

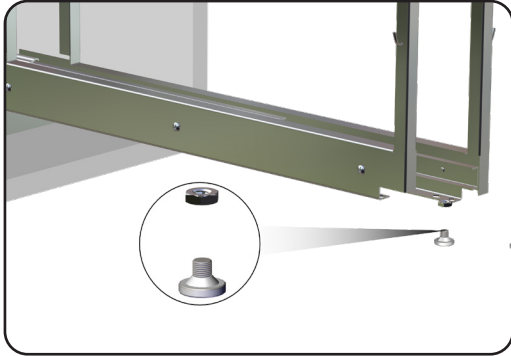

1. Locate the two Wheels and two M6 Hexagon Nuts

Begin Step Four by locating the two wheels and two m6 hexagon nuts and align them to the following locations, as shown. The placement of the wheels and nuts are dependent on the layout of your desired orientation. For right side openings, the right wheel is installed into the round hole with the left wheel into the ellipse hole. For left side openings, the right wheel is installed into the ellipse hole with the left wheel into the round hole

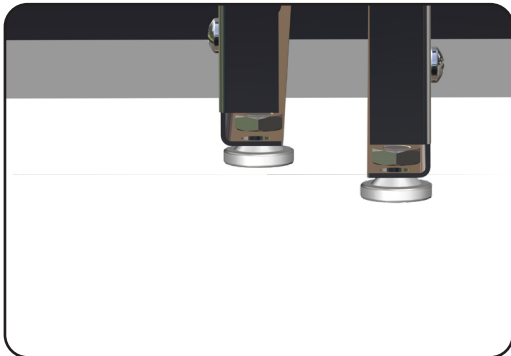


2. Secure both wheels and nuts

Tighten the nuts and wheels into the following locations based on the orientation of your opening.


INSTRUCTIONS

Step 5 - Attaching the Baskets

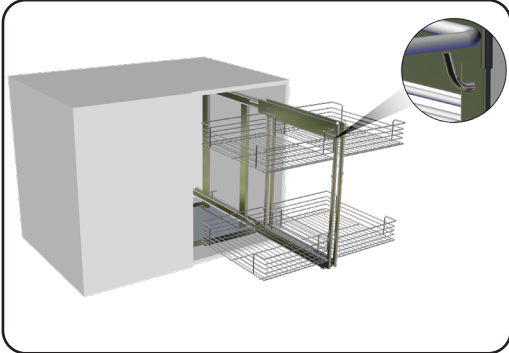


1. Locate the baskets

Locate four baskets and align each basket into each allocated section of the frame assembly. The frame assembly will have specific hooks protruding from the frame that will serve as a way to hold the baskets and secure them into place. Push the baskets so that the hooks will hold each basket, as shown.

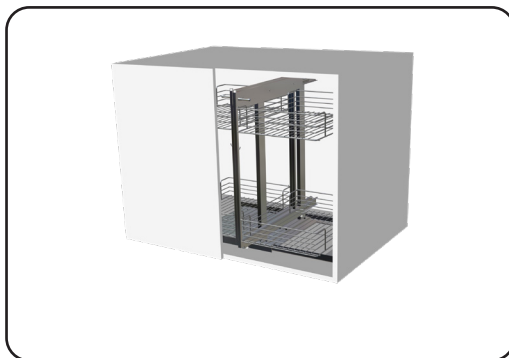

2. Storing the baskets into place


To store the baskets into the cabinet, simply push each section of the frame one by one towards the back of the inner section of the cabinet until all baskets are pushed into place

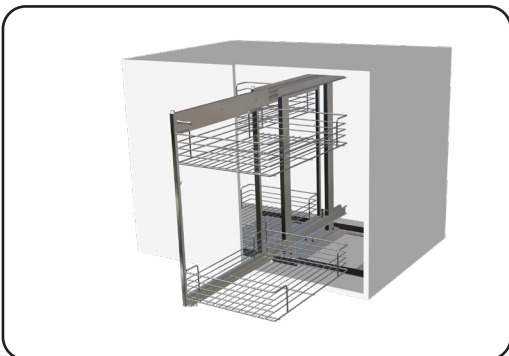

3. Taking the baskets out

To take the baskets with items on it, simply pull out each section of the frame using the previously installed handles and extend the frame outward one by one until both sections are extended outward.

Technical support

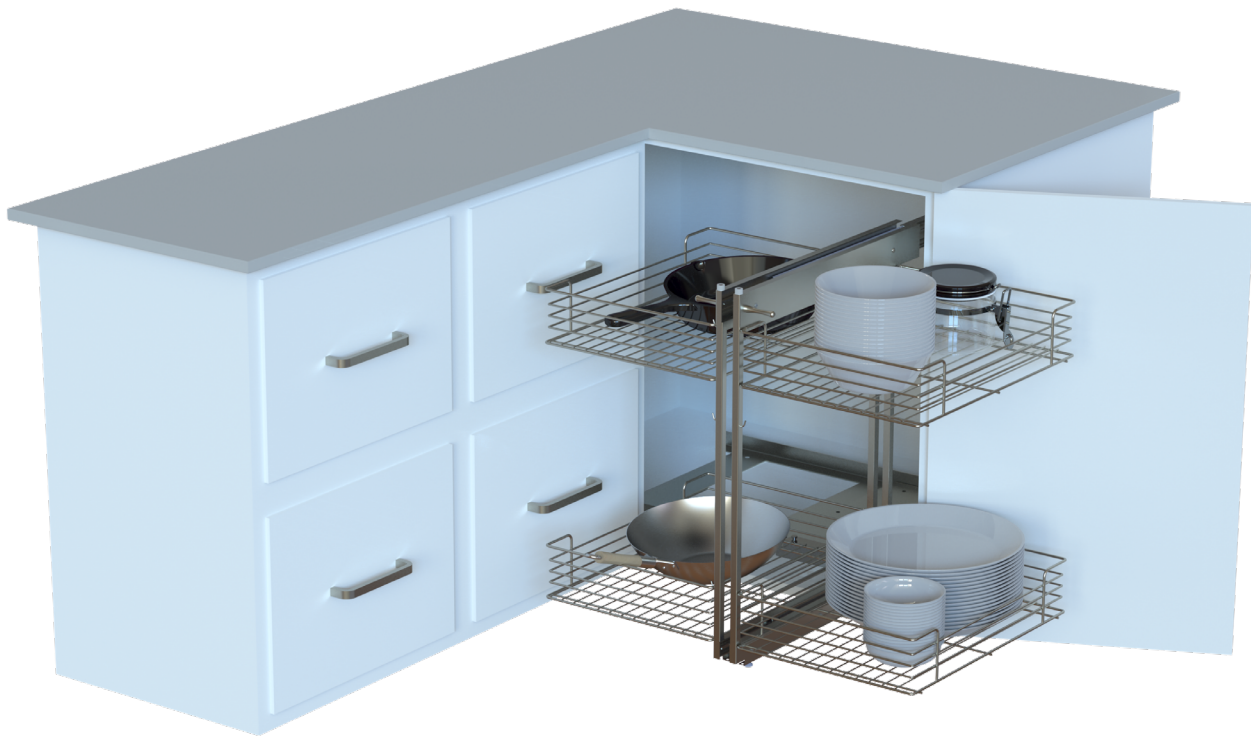

STACKHAUSTM

SOPHISTICATED STORAGE

www.stackhaus.com.au
info@stackhaus.com.au

© StackHaus 2019, All Rights Reserved

STACKHAUSTM
SOPHISTICATED STORAGE