



By Sorelle - A Division of C&T International, Inc.
46 Whelan Road, East Rutherford, N. J. 07073 U. S. A.
Tel, +1(201)531 1919 Fax, +1(201)531 1920
Website: www.sorellefurniture.com

Princeton Elite Double Dresser


Assembly Instruction




Important Information:

Read all instructions **BEFORE** assembling crib.
KEEP INSTRUCTIONS FOR FUTURE USE.


Assembly Parts

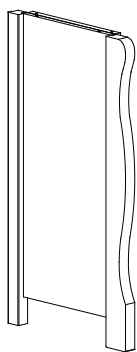


(A) Left Side Panel (x1)

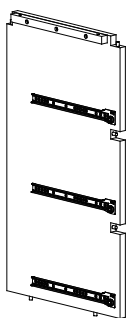


(B) Middle Panel (x1)

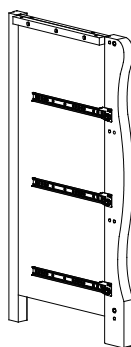


(C) Right End (x1)




(D) Front - Top Rail(x1)

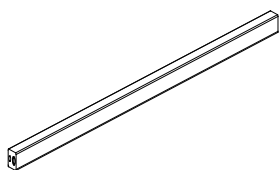


(E1) Front- Middle Upper Rail (x1)

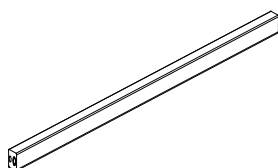


(E2) Front- Middle lower Rail (x1)

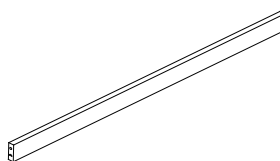


(F) Front- Bottom Rail (x1)




(G) Rear - Top Rail (x1)

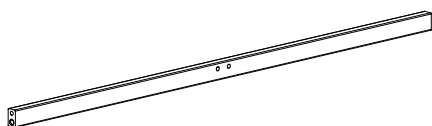


(H) Rear - Bottom Rail (x1)

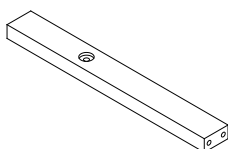


(I) Support rail (x 1)




(J) Top Panel (x1)

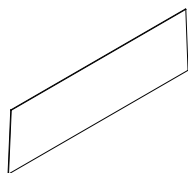

(K) Back Panel(x2)

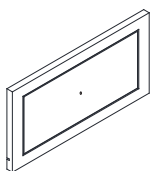

(R) Drawer Front (x6)




(L) support legs (x1)




(R4) Drawer Bottom (x6)




(R1) Drawer Left (x6)

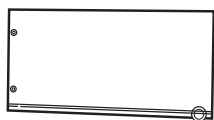

(R2) Drawer Right (x6)

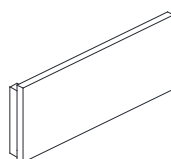


(R3) Drawer Back (x6)




(R5) Drawer support (x6)

Assembly Parts


Hardware list




(a) M6 x 45mm Allen bolt (10 pcs)



(c). Metal Connector B (6 pcs)



(b) M6 x 35mm Allen bolt (5 pcs)




(d) M6 x 28mm Allen bolt (7 pcs)



(e) M4 x 19mm Allen bolt (6pcs)



(f) 8 x 30 mm Wood Dowels (29 pcs)



(g) 25mm Wood Screw (48 pcs)



(n) 6 x 30 mm Wood Dowels (24 pcs)



(h) Knob (x6)




(o) 15mm Phillips Screw (26 pcs)



(j) Metal Connector A (6 pcs)



(p) 12mm Phillips Screw (18 pcs)

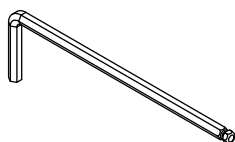

(k) Allen Key (1 pc)



(i) Wall Strap Kit (1 pc)

Double Dresser Assembly

- ① Assembly the support rail (I) and support legs (L) .
Assembly the support rail (I) and front-bottom rail (F) and rear-bottom rail (H) , by using 4 wood dowels and 1 Bolt (d)&1Bolt(b). as Figure 1.

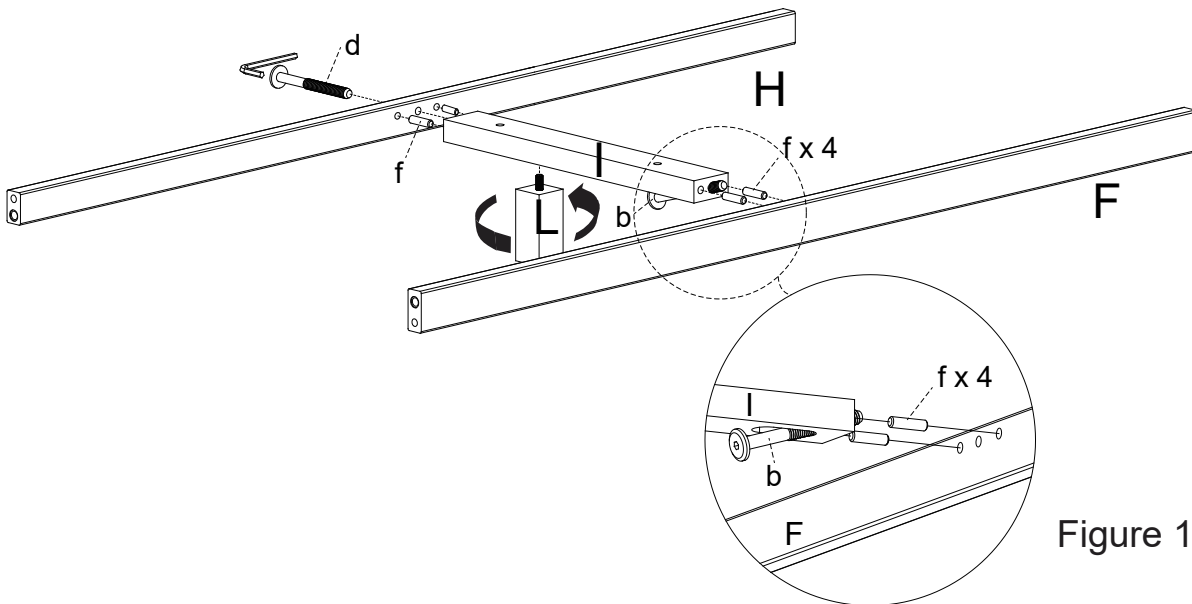


Figure 1

- ② Attach middle panel (B) to support rail (I) , by using 2 wood dowels (f) as Figure 2.

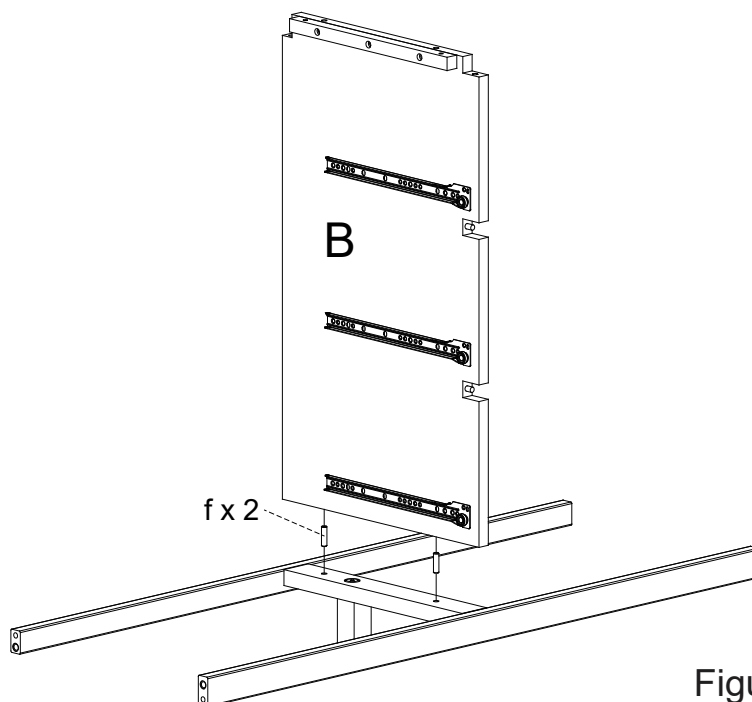


Figure 2

Double Dresser Assembly

- 3** Attach Front Top rail (D) & Front Middle Upper rail (E1) & Front Middle lower rail (E2) & Rear Top rail (G) to Middle Panel (B), By using 4 wood dowels (f) as Figure 3.

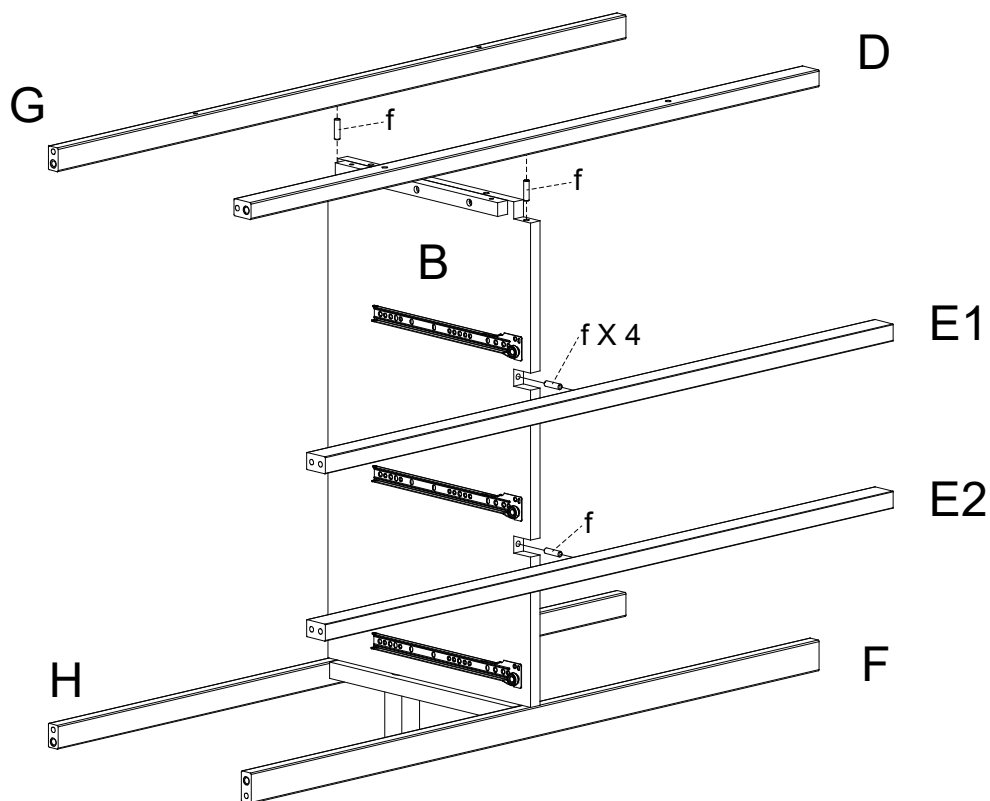


Figure 3

- 4** Attach left side panel (A) and right side panel (C) to Front Top rail (D) & Front Middle rail (E) & Front bottom rail (F) & Rear Top rail (G) and Rear bottom Rail (H) by using 10 Bolts (a) & 14 wood dowels(f) . as Figure 4.

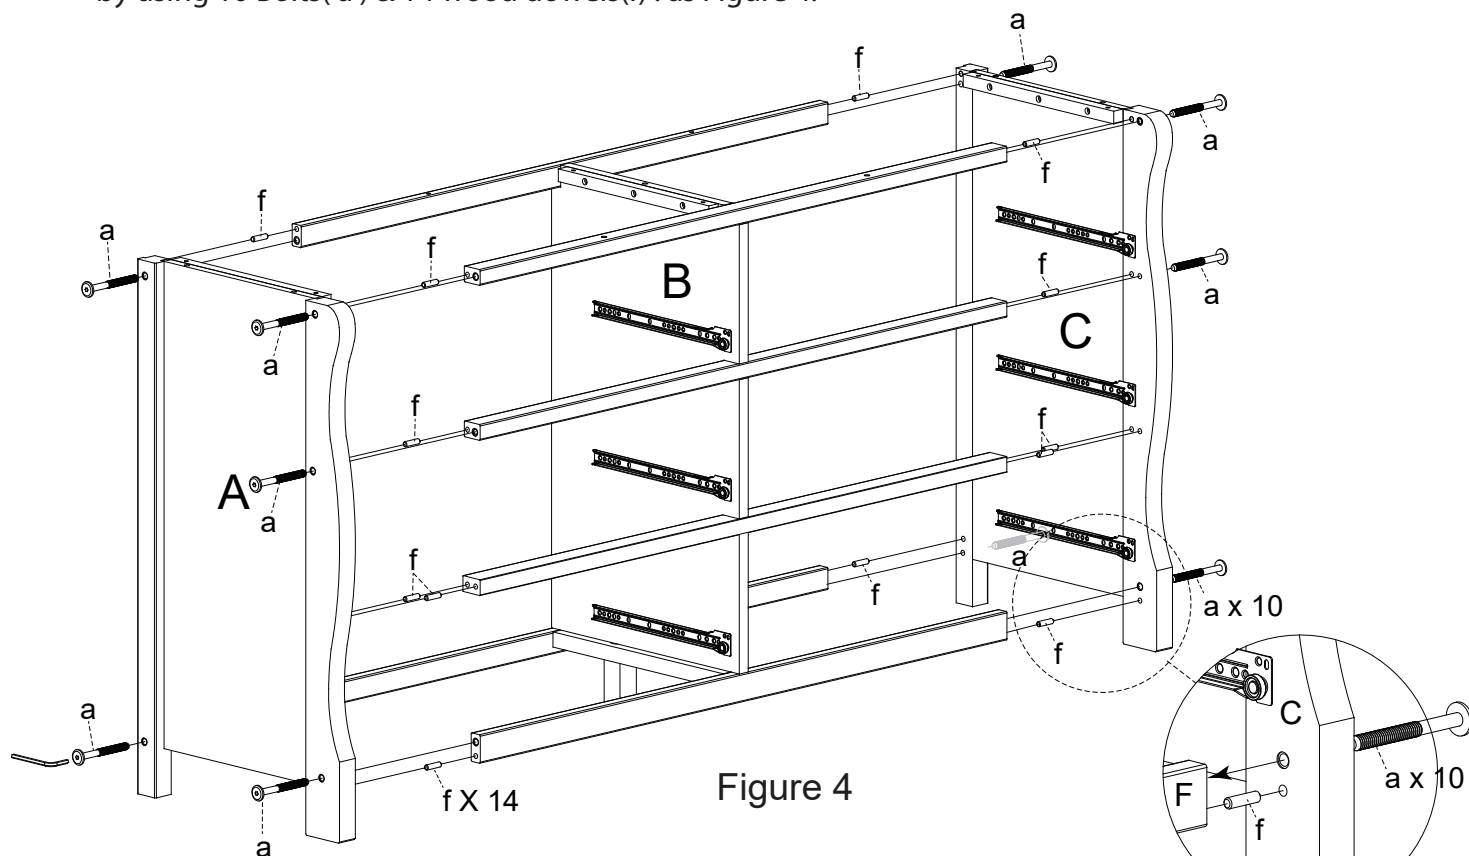


Figure 4

Double Dresser Assembly

- 5 Attach Top Panel (J) to Side panel by using 5 wood dowels (f) and 4 Bolts(b) and 6 Bolts (d) . as Figure 3.


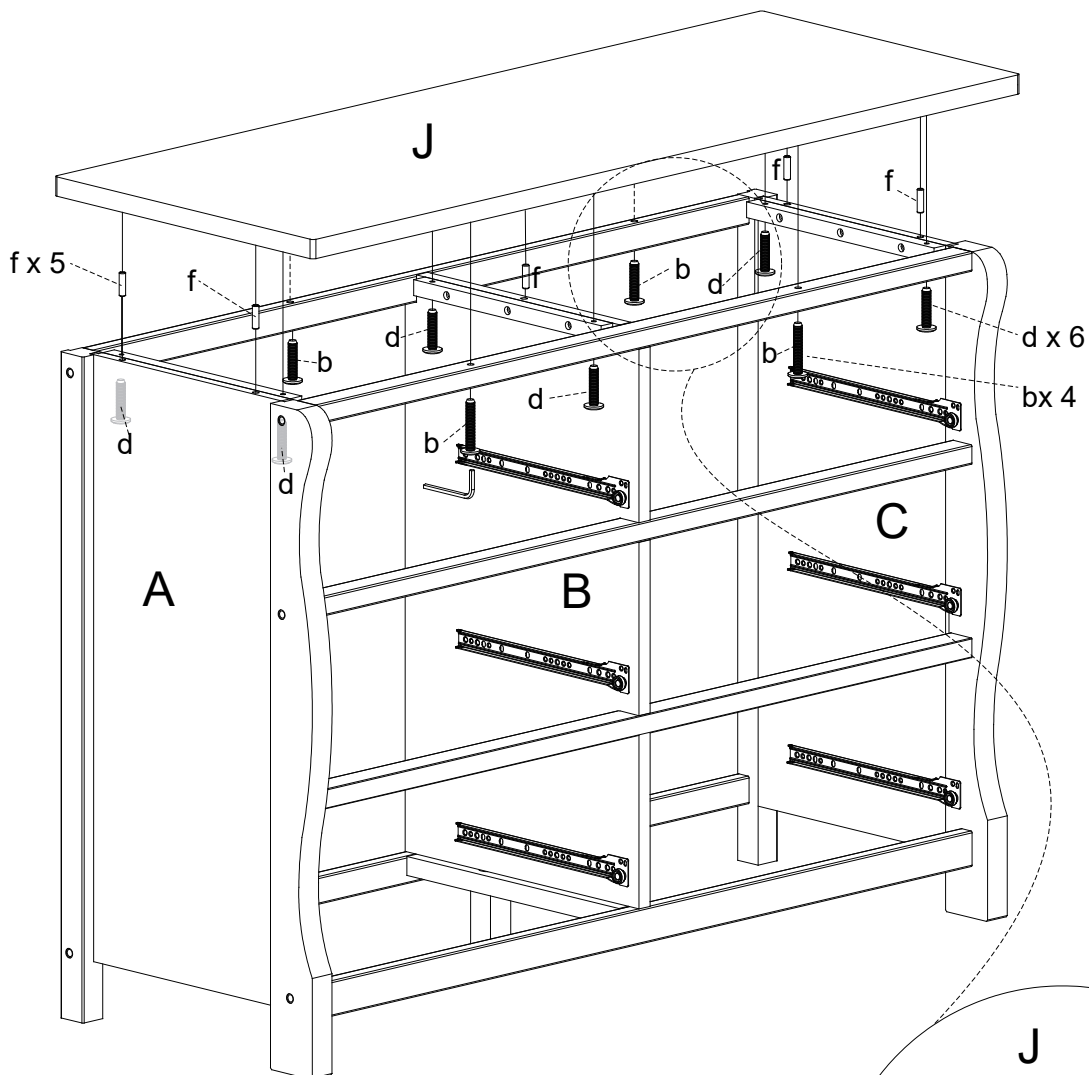



Figure 5

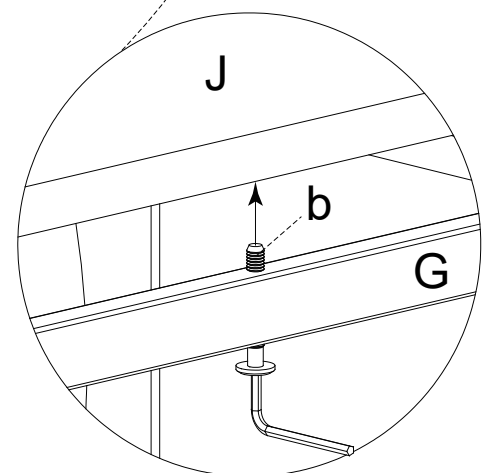

Drawer Assembly


1. Working on a padded flat surface, attach Drawer Sides (R1&R2) to Drawer Back (R3) with Philips Head Screw. *Figure 1*

①

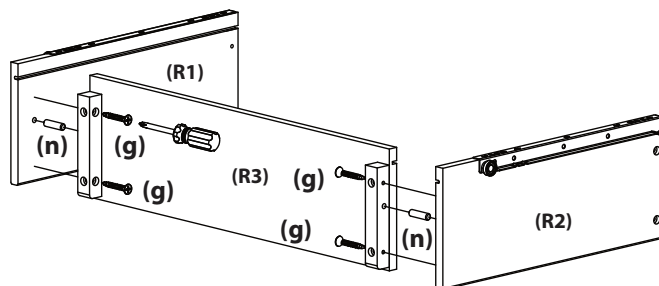


2. Slide Drawer Bottom (R4) into drawer assembly. *Figure 2.*

②

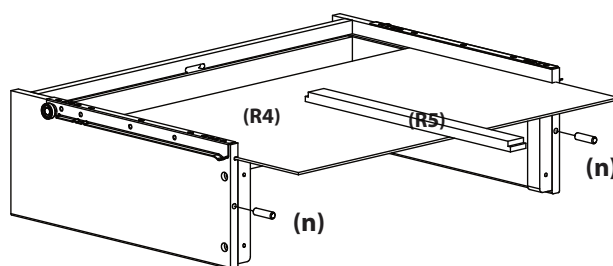

3. Secure both sides of Drawer Front (R) to drawer assembly with four (4) Screws (g). *Figure 3.*


③

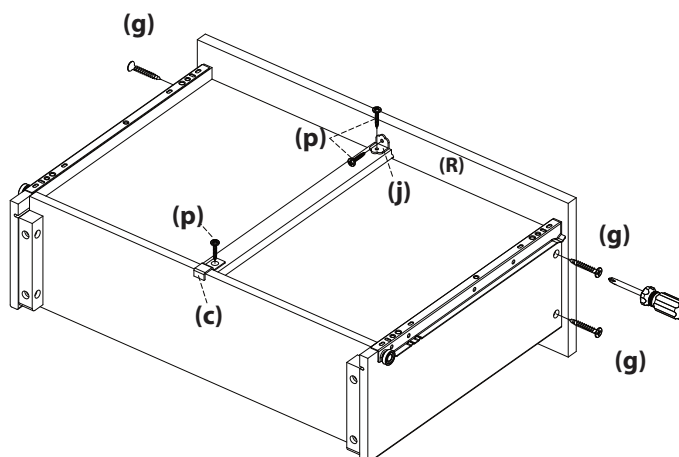

Check all screws for tightness.

4. Using Drawer Knob Screw (f), install one (1) Knob (j) on Drawer. *Figure 4.*

④

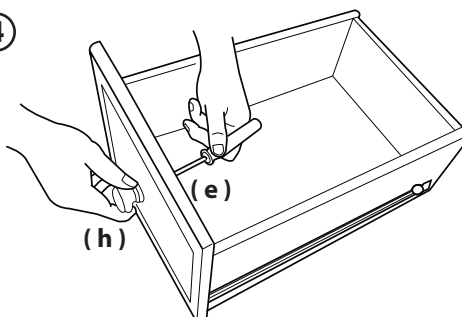

**Repeat for all drawers.
Set drawers aside for later use.**

Double Dresser Assembly

- ⑦ Assembly the drawers as Figure 6.

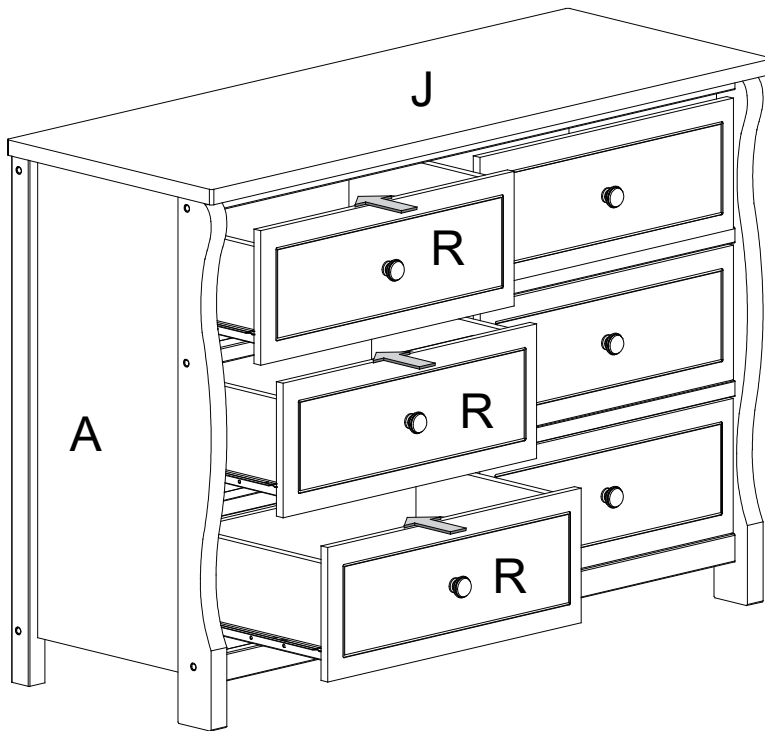


Figure 6

- ⑧ Use 26 pcs Wood Screws (o) to attach the Back Panel (K) to the dresser As Figure 7..

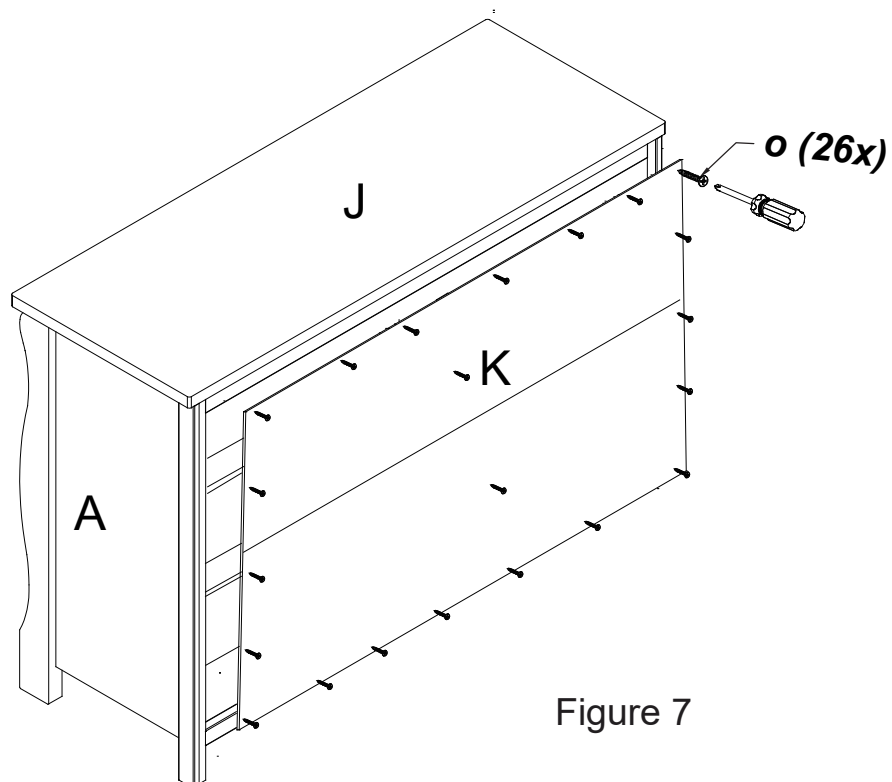


Figure 7